

CONTACT US

W: www.mokasfx.com

E: info@mokasfx.com

MOKA SFX®

AMAZING BOOSTER FOR STAGE

PRODUCT: CONFETTI MACHINE

MODEL: MK-CN01

USER MANUAL



VERSION 2.0

DISCLAIMER

WARNIN: Read this manual carefully before installing and/or using this product. Failure to read the manual and to follow the printed instructions may lead to personal injury and/or damage to the product.

FORWARD

1. Welcome to use fan mini confetti machine, receive new machine, open the packing and check accessories is well-found or not, if the accessories is not whole, please contact your Supplier.
2. Put the machine on proper position, adjust jet machine inclination, connect the power supply.
3. This machine provides with two control method, one on manual control, two on wireless control.
4. Start-up machine switch, grip the pipet put in confetti paper, moment plentiful confetti paper emerge.
5. Please choose gold, argent PVC lamelliform or confetti paper act on expendable, the paper standard can't exceed 5cm.

LIABILITY

Accepts no liability for claims from third parties arising from unauthorised use, use other than that stated in this manual, and use other than in accordance with the General Conditions registered at the Chamber of Commerce.

Refer further to the General Conditions. These are available on request, free of charge.

Although considerable care has been taken to ensure a correct and suitably comprehensive description of all relevant components, the manual may nonetheless contain errors and inaccuracies.

Should you detect any errors or inaccuracies in the manual, we would be grateful if you would inform us. This helps us to further improve our documentation.

TECHNOLOGY PARAMETER

Product Name	Fan Mini Confetti Machine
Model	MK-CN01
Voltage	AC110V/220V 50/60Hz
Power	1800W
Control	Wireless control or manual
Size(mm)	780 ×365 ×350mm(L×W×H)
Weight(Kg)	13KG

MOKA SFX®

W: www.mokasfx.com

E: info@mokasfx.com